

Instructions on Printer TEST V3.0C Testing tools

I. Introduction of Main Interface

The screenshot displays the main interface of the 'Printer TEST V3.0C' application. The interface is organized into several functional sections:

- Port Select (1):** Radio buttons for LPT, COM, USB, and NET. The 'COM' option is selected.
- Printer Type (2):** Radio buttons for POS-58, POS-76, and POS-80. The 'POS-80' option is selected.
- LPT Set (3):** A dropdown menu currently showing 'LPT1'.
- COM Set (4):** Fields for COM port (COM1), Baud rate (9600), and RTS.
- NET Set (5):** Fields for Local IP (192.168.1.110), Printer IP (192.168.123.100), New IP (192.168.1.100), and New ID (0.0.0.0). Includes buttons for Refresh, Connect, Ping, Set New IP, and New ID.
- Content (6):** A 'Rep:' field with the value '1', a 'HEX' checkbox, a 'Clear' button, and an 'AutoSend' checkbox.
- Content (7):** A 'Cyc' field with the value '500 ms' and a 'CutPaper' checkbox.
- Content (8):** A text area containing the message: 'Welcome to use the impact and thermal printer manufactured by professional POS receipt printer company!'.
- Print (10):** A button to initiate printing.
- Cut Paper (11):** A button to cut the paper.
- Open cash drawer (12):** A button to open the cash drawer.
- Traditional (13):** A button for traditional printing mode.
- Driver Print (14):** A button for driver printing.
- Advanced (15):** A button for advanced printing options.
- 中文简体 (16):** A button to switch the interface to Simplified Chinese.

At the bottom of the window, there is a logo for 'POS' (a red car), the title 'POS PRINTER TEST V3.0C', and the copyright notice 'Copyright(C) JS'.

1 Communication port selection:

Four options of printer communication interface: parallel port, serial port, USB port and Ethernet port.

2 Printer type selection:

Printers are divided into three types according to paper: POS-58, POS-76 and POS-80.

3 Parallel port Settings (LPT Set):

Parallel port Settings ----be consistent with the computer communication parallel port number.

4 Serial port Settings (COM Set):

Serial port Settings ---- set the serial port number, baud rate, flow control, etc.

5 Ethernet port Settings (NET Set):

Change the IP address of Ethernet port printer through Ethernet port Settings.

“Local IP” --- computer’s real IP address which can be added manually or by Clicking "refresh" button.

“Printer IP” ---printer’s current IP address , its detailed information can be seen on self- test page, only suitable for Ethernet port printers.

“New IP address” --- the new IP address the printer’s IP address is to be changed to (printer’s IP address shall be in the same network segment as the connected computer’s to realize intercommunication).

“New ID address” --- the new ID address the printer’s ID address is to be changed to (Printer’s ID address must be an only address within a network).

Ethernet port settings are operated by means of HUB and SWITCH, in case that the settings can’t be changed by ROUTER, other means can be used, please refer to the PDF in the folder "IP address changes and other functional specification" on the CD.

6 Number of the copies:

It refers to the printing quantity of the repeat print of the test content.

7 HEX:

Data can only be transmitted by inputting hexadecimal after having selected printing content. (It’s mainly used to send instructions to the printer).

8 Printing content:

Edit the printing content here, and send data by clicking "Print" button.

9 Automatically sending, cycle, paper cutting:

“Automatically sending” ----- Click the "Auto Send" button and the software will automatically send the data in the printing content column to the printer.

“Cycle” ----- cycle time to send data automatically

“Paper cutting” ----- Printer will automatically do paper cutting work according to the cycle time after the “Auto Send” button and “cyc” button have been set.

10 Print:

Print the information and data in the “content” edit box.

11 paper cutting:

Test the function of paper cutting action.

12 Open cash drawer:

Test the cashbox function

13 Traditional font test:

Used for testing traditional fonts printing

14 Driver print:

Call the installed Windows driver to test print, printing out the information suggests successful installation.

15 Advanced:

Click "advanced" button, and set up more features to have print test, below is the detailed introduction.

16 English:

It’s for switching software interfaces between English and Chinese.

II. Setup instructions for “advanced” button

Click the "advanced" button on the main interface, the following interface will pop up:

Advanced

H Parameter Set: 1 Print H Set Delta 5

Code page Set: 2 PrintCodePage SetCodePage 0

NV Logo Test: 3 NV Download

Barcode Printing test: 4 Print BarCode UPC_A 162 Height

P76 Buzzer Set: 5 BuzzerSet OFF

P76 Density Set: 6 Set NORMAL

P80 Black sens: 7 SetSensitivity 12 12 SensH

baud rate set: 8 BaudRate Set 19200 (Only P58 and P76E)

DIP Setting: 9 P58 Set DIP P80 Set DIP P76 Set DIP

2D Barcode test: 10 Print 2D Barcode

Net Setting: 11 Set Net BluetoothSet

USB MODE Setting: 12 USB Printing Virtual COM

Black Mark Setting: 13 BlackMarkSet

File data send: 14 Open File Send

1 Set H parameter:

Its Main function is for definition adjusts of the 76 series needle printer. First click "Print H", and the printer will print 16 groups of H letters from 0 to F, then set "Set delta" button by choosing the clearest group.

2 Set Code page:

It's for changing the default printer code page. Following is part of the code pages of the 80 series machine,


Code Page:

0: PC437(Std.Europe)	1: Katakana
2: PC850(Multilingual)	3: PC860(Portugal)
4: PC863(Canadian)	5: PC865(Nordic)
6: (West Europe)	7: Greek
8: (Hebrew)	9: (East Europe)
10: (Iran)	16: (WPC1252)
17: PC866(Cyrillic#2)	18: PC852(Latin2)
19: (PC858)	20: (IranII)
21: (Latvian)	22: (Arabic)
23: (PT1511251)	24: (PC747)
25: (WPC1257)	27: (Vietnam)
28: (PC864)	29: (PC1001)
30: (Uigur)	31: (Hebrew)
32: WPC1255(Israel)	25: (Thai)

Input the desired parameter value in “Set code page”, and then complete the setting by clicking "set code page" button. Click "print code page" button to view the setup code.

3 NV logo demo:

Click the "NV download "button, the menu below will pop-up:

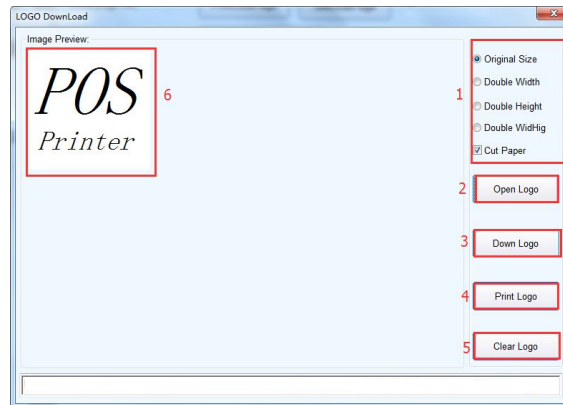

3.1 Size requirement and function selection of paper cutting of NV LOGO printing

3.2 Open LOGO:

Click and select BMP format picture or the LOGO file that you want to print.

3.3 Download NV LOGO:

Click the download button after opening the BMP format file and the file will be downloaded to the printer. Print the file content by clicking " print LOGO" button.

3.4 Print LOGO:

Click this button to complete the LOGO image printing.

3.5 Clear LOGO:

Remove the downloaded NV LOGO.

3.6 Show current NV LOGO

4 Barcode printing test:

Choose a variety of barcode types and height to test the print with a total of nine kinds of one-dimensional code choice.

5 P76 Buzzer Settings:

It's a setting for turning on or off the beeper for part of the 76 series machines.

6 P76 Printing density Settings:

To adjust the printing effect of 76 series machine, there are modes: LIGHT、NORMAL、 DARK.

7 P80 Black mark sensitivity Settings:


The adjustment of black mark sensitivity Settings for 80 series machines according to different black mark paper. Valid only when black mark function set is on.

8 Serial port baud rate Settings: (only for 58 series and P76E machines)

To set different baud rate (such as: 9600, 19200, 38400, etc.)

9 DIP switches Settings:

Three modes: 58 series, 76 series and 80series (only for machines without dial switches)

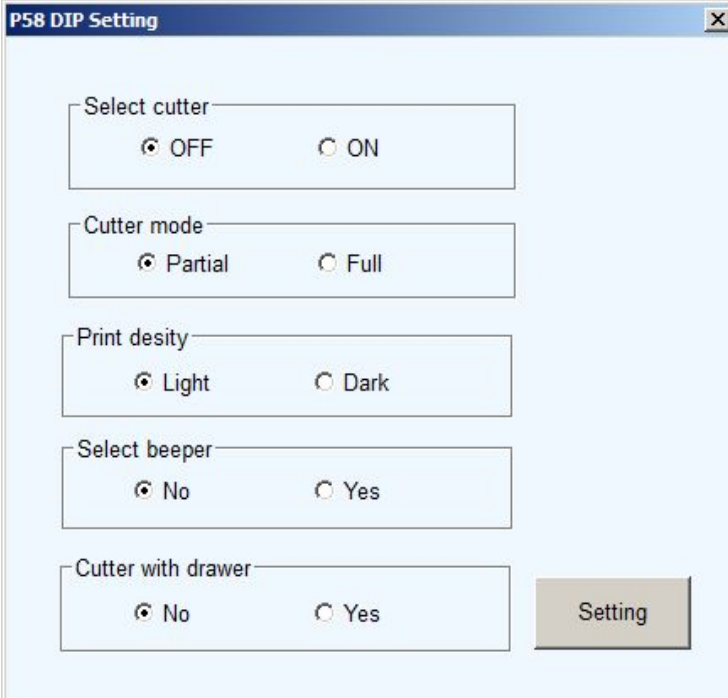


The screenshot shows a dialog box titled "P58 DIP Setting" with a close button (X) in the top right corner. It contains five radio button groups for configuration:

- Select cutter:** OFF, ON
- Cutter mode:** Partial, Full
- Print density:** Light, Dark
- Select beeper:** No, Yes
- Cutter with drawer:** No, Yes

A "Setting" button is located at the bottom right of the dialog box.

(58series)

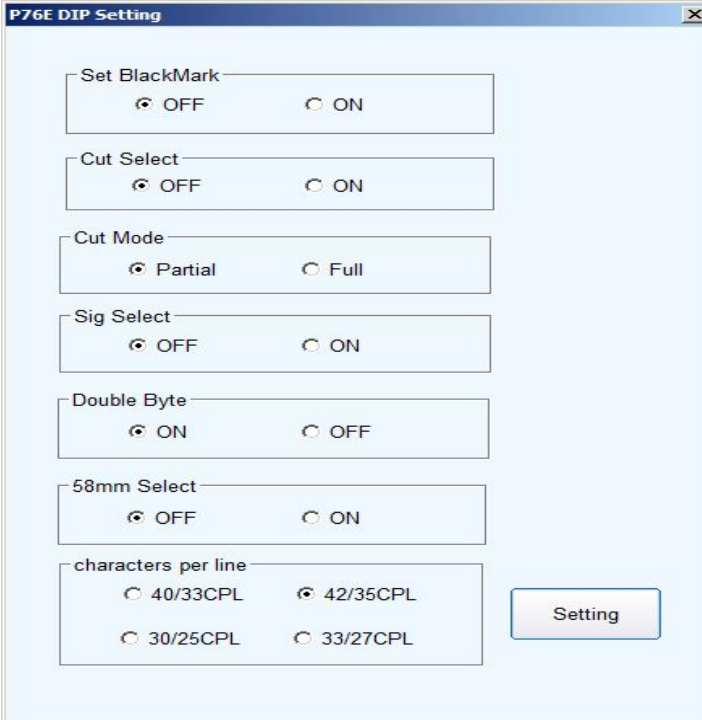

The screenshot shows a dialog box titled "P76E DIP Setting" with a close button (X) in the top right corner. It contains seven radio button groups for configuration:

- Set BlackMark:** OFF, ON
- Cut Select:** OFF, ON
- Cut Mode:** Partial, Full
- Sig Select:** OFF, ON
- Double Byte:** ON, OFF
- 58mm Select:** OFF, ON
- characters per line:** 40/33CPL, 42/35CPL, 30/25CPL, 33/27CPL

A "Setting" button is located at the bottom right of the dialog box.

(76series)

P80 DIP Setting

Select cutter
 YES NO

Select beeper
 YES NO

Print desity
 Set(1-8) default

Chinese mode
 YES NO

Character per line(FontA/B)
 48/64 42/56

Cutter with drawer
 NO YES

Serial baudrate
19200

Setting

(80series)


10 2 D barcode testing:

Edit and print test of two-dimension codes

two dimensional barcode test

Error correction level:
7%

amplification:
7



Welcome to Printer
Technology to create advantages
Quality to win in the future

Back Cut Clear Generate Send Data

11 "Network Settings"

It includes "Network Settings" and "Bluetooth Settings"

The screenshot shows a window titled "Net Setting" with two main sections: "Net Setting" and "WIFI Setting".

Net Setting:

- IP Address: 192 . 168 . 123 . 100 (labeled 1) with a "SetIPAddr" button.
- NetMask: 255 . 255 . 255 . 0 (labeled 2) with a "SetNetMask" button.
- GateWay: 192 . 168 . 123 . 1 (labeled 3) with a "SetGateWay" button.
- A "Set above contents" button is located below these fields.

WIFI Setting:

- SSID: Printer001 (labeled 4)
- WIFI Key: 123456789 (labeled 5)
- Key Type: WPA2_AES_PSK (labeled 6)
- A "Setting All" button (labeled 7) is on the right side.
- A "Return" button is at the bottom right.
- A "Set above contents" button is at the bottom center.

(Network Settings)

"1" Set up the Printer's IP address.

"2" Set up the Subnet Mask.

"3" Set up the Gateway.

"4" WIFI SSID address settings. Note: the SSID address is the name of your Wireless Router's name.

For example, if the address of the current Router (SSID) is: *Pinter001*, then this SSID address should be typed in the tab of "SSID".


"5" WIFI password settings. Note: the password of the Wireless Router

For example, if the WIFI's current password is: *123456789*, then this password should be typed in the tab of "WIFI password".

"6" Encryption type of WIFI SSID settings. Note: the encryption type of the Wireless Router.

For example, if the encryption type of the Router (SSID) is: *WPA_TKIP_AES_PSK*, then this information should be selected in the tab of "SSID Encryption type".

"7" After filling the above information, click the "Setting All" option. The printer will "BEEP". Next, restart the printer.

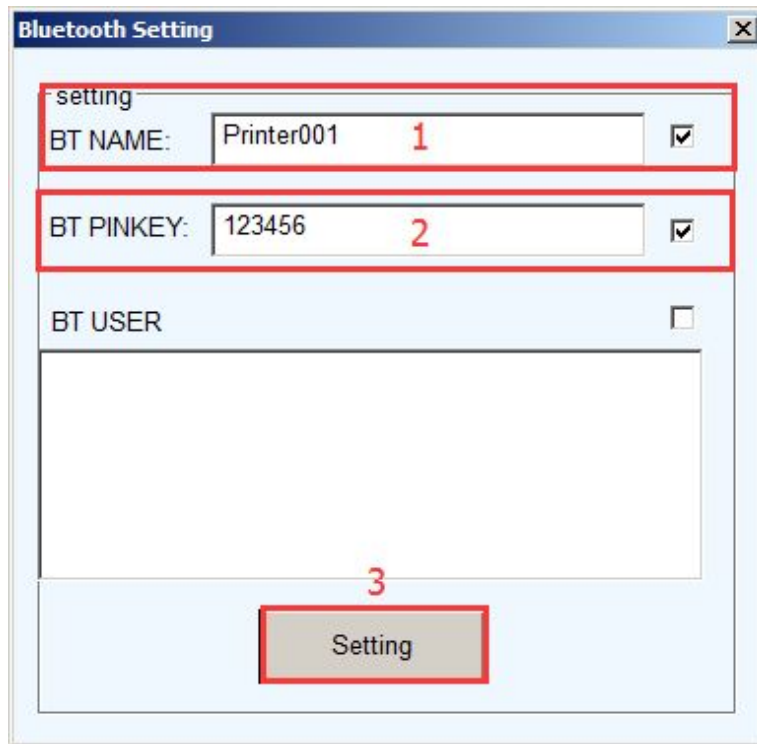

(Bluetooth Settings)

“1” Set up the Port name of the Bluetooth Printer (the Factory Default BT NAME is “Printer001”)

“2” Set up the Password of the Bluetooth Printer (the Factory Default BT PINKEY is “123456”)


“3” After finishing the above settings, click “Setting”, and then finished the settings of Bluetooth printer Parameters.

12 “USB Mode Setting”

Mode Setting of printer’s USB port includes Usb Printing and Virtual Com. USB mode switches according to customer demand. For specific operation, refer to file “instructions of switching between USB port and virtual Com ”in the folder “IP address change and other functional specification”

13 "Black mark Settings"

To set special paper printing with black mark.

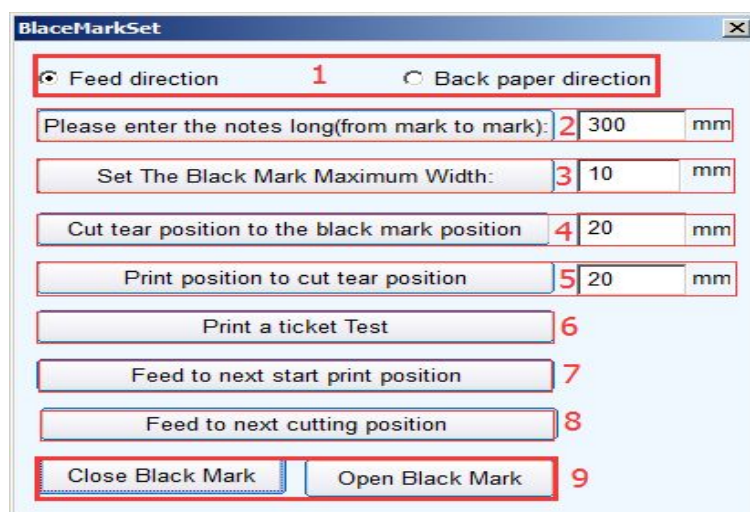

13.1 Offset in paper-feed direction, offset in paper unwinding direction

To set the direction of data calculation for paper cutting position, the default value is feed direction.

13.2 "Please enter the black mark spacing (mark length)"

To calculate the center distance of two black marks.

13.3 "Set the black mark Maximum width"

It's a value to calculate the actual height of a black mark.

13.4 "the offset of paper cutting position relative to the black mark position"

It's to calculate the actual distance from the paper detector in the print head to the paper cutter.

13.5 "Distance between the print starting position and paper cutting position"

It's to calculate the distance from the print starting position to paper cutting position.

13.6 "Print a ticket test"

Click this button and a note will be printed out. If it's properly set, paper will automatically go a length of black mark and then be cut.

13.7 "feed to next print position"

Click this button and paper will go to the next print starting position for a black marker. Print out the information to test the right position.

13.8 "feed to the next cutting position"

Click this button and paper will go to the next paper cutting position and paper will be cut to test the accuracy of paper cutting position.

13.9 Turn on the black mark, turn off the black mark

Black mark function is off by default. Turn on black mark function to make related Settings. In case black mark position is detected incorrect, please reset referring to 7 "P80 black mark sensitivity" of "advanced".

14"Send file data"

Click button, choose and open TXT format file in the pop-up dialog box, and then the printer will print the contents of the file.